

JARD Trigger System for Mossberg 4x4/MVP/Patriot

Operator's Instruction Manual



3149 Nest Ave. – Sheldon, IA 51201 Phone: 712-324-7409

Email: support@jardinc.com – www.jardinc.com



This firearm is intended for use only by experienced competitive shooters and professionals. You must take responsibility for your own actions. We will not be responsible for any loss, injury, or death resulting from the use or misuse of this product.

The handling and use of firearm bears with a certain unavoidable risks, like sky diving and rock climbing. If you are not willing to accept responsibility for your own actions, guns are not for you.

The use of any custom parts or modifications may void any warranty from the manufacturer of your firearm.

Returns will not be accepted on any parts that have been modified.

If you do not have a thorough understanding of the trigger and the purpose and function of all the parts, do not attempt to install this system. Have it installed by an experienced gunsmith.


JARD Trigger System for Mossberg 4x4/MVP/Patriot

YOUR JARD TRIGGER SYSTEM COMES SET FROM THE FACTORY, NO ADJUSTMENT NEEDED.

If you must make adjustments, follow these instructions carefully. Only adjust the trigger if you fully understand the adjustment process. Adjustments done incorrectly can make your firearm unsafe!

- 1. Verify the gun is unloaded, and remove the stock from the receiver.
- 2. The sear engagement screw (8A) may be adjusted. Use a 0.050" to turn the screw counter-clockwise several turns and close the bolt leaving the action cocked. Then, slowly turn this screw clockwise until the trigger fires. The screw must be backed off (counterclockwise) until safe sear engagement can be achieved, approximately ¼ turn.
- 3. To adjust the over travel screw (8B), cock the action and use a 0.050" hex key to turn this screw in until it contacts the trigger, so that pulling on the trigger will not release the sear. Then while pulling back on the trigger, turn the screw counterclockwise slowly until the trigger fires. It should then be turned slightly farther, so there is enough clearance between the sear and trigger when the trigger is pulled. If there is no clearance, the sear may not always be released cleanly when pulling the trigger.
- 4. Check the functioning of the trigger by slamming the bolt home (closing it sharply) several times. If the sear is not released when closing sharply, then it may be possible to adjust for less sear engagement, but if the sear is released it must be backed off further, and/or the weight of pull increased.
- 5. To adjust the pull weight, the spring tension screw (16) above the over travel screw may be adjusted with a 5/64" hex key. Turning the screw clockwise will increase the pull weight, and counterclockwise will decrease it. If the screw is turned in too far the spring will compress to solid and the trigger will not fire. If turned out to far the screw will fall out of the housing. If the desired pull weight cannot be acquired, replacing the trigger return spring may be required.
- 6. Adjust the offset safety screw with a 1/16" hex key so that there is NO trigger movement when the safety is on and the bolt is cocked. (Note: There must be sufficient sear engagement to allow reliable safety function.)
- 7. Install the receiver back into the stock and perform function and safety checks.

JARD Trigger System Mossberg 4x4/MVP/Patriot Parts Breakdown List

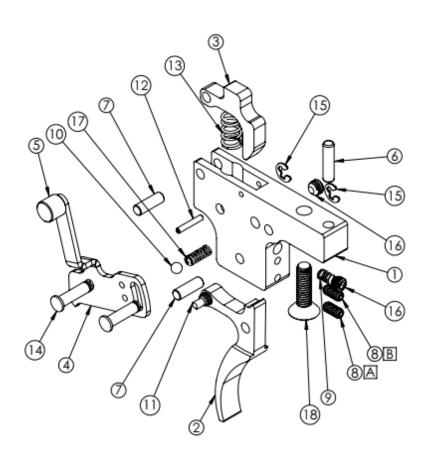

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	4240	Trigger Housing	1
2	4216	Trigger	1
3	4241	Sear	1
4	4242	Safety Plate	1
5	1231	Safety Knob	1
6	1437	Dowel Pin	1
7	1238	Dowel Pin	2
8	1390	(a) Sear Adj Screw (b) Overtravel Adj. Screw	2
9	1616 1058 1059 1060 1061	Spring 6oz 8oz 10oz 14oz 20oz	1
10	1163	.125 Ball	1
11	1444	Safety Screw	1
12	2406	Roll Pin	1
13	2918	Sear Spring	1
14	1452	Retaining Pin	2
15	1254	E-Clip	2
16	2952	Spring Adj. Screw	2
17	1060	Spring	1
18	1909	Mounting Screw	1

JARD, Inc.

3149 Nest Ave. – Sheldon, IA 51201 Phone: 712-324-7409 – Email: support@jardinc.com www.jardinc.com