



---

## Kimber Trigger System

---

*Operators Instruction Manual*



3149 Nest Ave. – Sheldon, IA 51201  
Phone: 712-324-7409  
Email: [jardusa@live.com](mailto:jardusa@live.com) – [www.jardinc.com](http://www.jardinc.com)

## **WARNING**

This firearm is intended for use only by experienced competitive shooters and professionals. You must take responsibility for your own actions. We will not be responsible for any loss, injury, or death resulting from the use or misuse of this product.

The handling and use of firearm bears with a certain unavoidable risks, like sky diving and rock climbing. If you are not willing to accept responsibility for your own actions, guns are not for you.

The use of any custom parts or modifications may void any warranty from the manufacturer of your firearm.

Returns will not be accepted on any parts that have been modified.

If you do not have a thorough understanding of the Ruger Precision Trigger Assembly and the purpose and function of all the parts, do not attempt to install this system. Have it installed by an experienced gunsmith.


### Jard Kimber Replacement Trigger

Read instructions completely before beginning the procedure.

Your Jard trigger system comes adjusted from the factory and should be a replacement only procedure, however should you decide to modify the factory setting, below are some suggestions. (note: because of variations some minor inletting may be required)

1. Verify the gun is unloaded, and remove the the stock from the receiver.
2. To adjust the overtravel screw (top screw), with the action cocked, turn the screw in until it comes in contact with the trigger (pulling the trigger will not release the sear). While pulling back on the trigger, turn the screw counter clockwise slowly until the sear is released; it should then be turned farther ever so slightly, so there is ample clearance between the sear and the trigger when the trigger is pulled. If there is no clearance, the sear may not always be released clearly when pulling the trigger.
3. The sear engagement screw (bottom screw) may now be adjusted. Turn the screw counter clockwise several turns and close the bolt, leaving the action cocked. Now turn the screw clockwise until the sear is released. Now the screw must be backed off (counter clockwise) until a safe sear engagement can be achieved.
4. Check the functioning of the trigger by slamming the bolt home (closing it sharply) several times. If the sear is not released when closing sharply, then it may be possible to adjust for less sear engagement, but if the sear is released it must be backed off further, and/or the weight of pull increased.
5. Install the receiver back into the stock and perform function and safety checks

# Kimber Trigger Assembly Parts Breakdown List

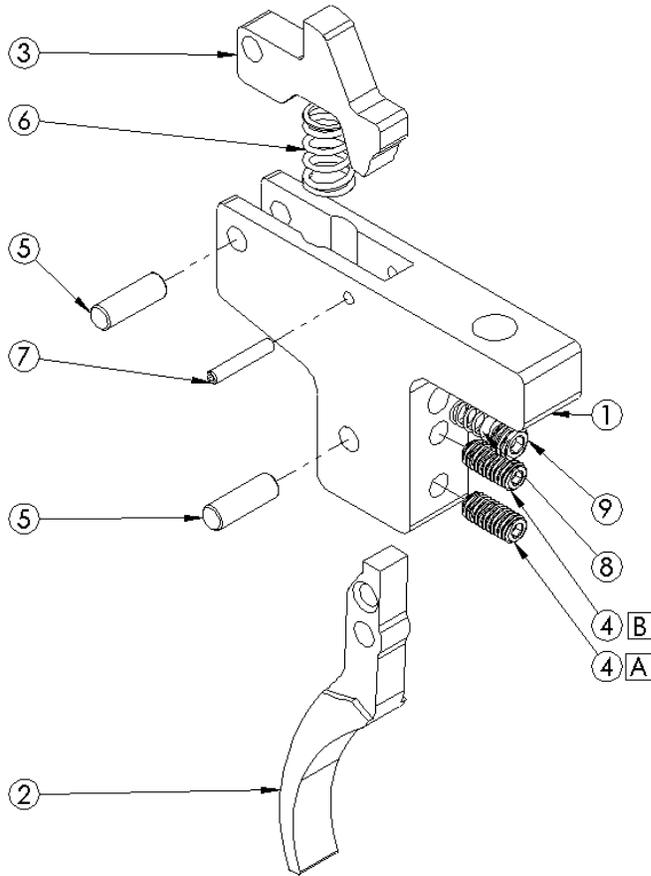

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	2705	Housing, Kimber	1
2	2702	Trigger	1
3	2704	Sear	1
4	1155	Sear Screw (A) Safety Screw (B)	2
5	1238	Dowel Pin	2
6	1367	Sear Spring	1
7	2406	Roll Pin	1
8	1059 1060 1061 1062 4116 (-2Coils)	Spring 9oz 12oz 18oz 22oz 36oz	1
9	2952	Spring Adj. Screw	1

## Jard, Inc.

3149 Nest Ave. – Sheldon, IA 51201

Phone: 712-324-7409 – Email: [jardusa@live.com](mailto:jardusa@live.com)

[www.jardinc.com](http://www.jardinc.com)